


Replacing the engine torque bracket

Removal

Removing the torque bracket

Note! As the illustrations in this service information are used for different model years and / or models, some variation may occur. However, the essential information in the illustrations is always correct.

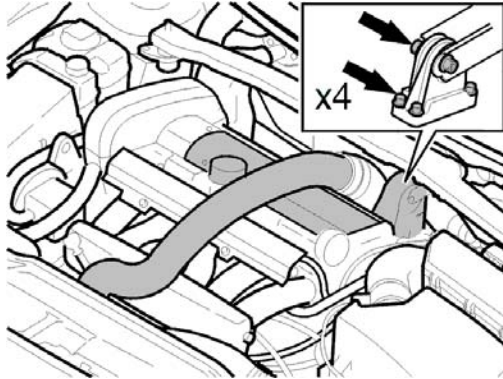

Remove


- the engine stabiliser brace
- the charge air pipe (only turbocharged (TC) engines)
- the screw for the dip stick pipe (6 cylinder automatics only)
- the oil filler cap
- the cover over the ignition coils
- the torque bracket.

Installation

Installing the torque bracket

Install

- the torque bracket. Tighten the screws (A). Tighten to **50 Nm**
- the screw for the dip stick pipe (6 cylinder automatics only)
- the cover over the ignition coils
- the oil filler cap
- the charge air pipe (only turbocharged (TC) engines)
- the engine stabiliser brace.

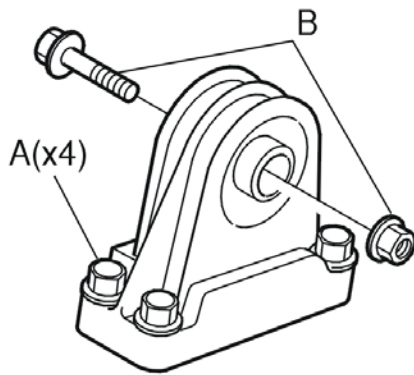

Tighten the screws on the suspension turrets. Tighten to **50 Nm**. Tighten the screw in the torque bracket (B). Tighten to **80 Nm**.